

## Hybrid Analog Timer Instructions



**COASTAL HYBRID ANALOG SYSTEM** includes the Hybrid Analog controller, aluminum mounting rack, ½ HP motor, 140 GPH pump, pump manifold with check valve, ½” intake line with filter, 3/8” return line with blowback valve and a 55 gallon black poly drum with vinyl seamless cover. Dimensions 44”x24”x24”



### TO SET THE CURRENT TIME, ROTATE THE OUTER DIAL OF THE CLOCK TO GET CLOSE.

The white triangle at the “two o’clock position” is the current time

### THEN USE THE HANDS IN THE MIDDLE TO SET EXACT TIME.

Turn the minute hand clockwise until the time of day on the outer dial is aligned with the triangle marker on the inner dial (two o'clock position).

### PROGRAMMING

The 24-Hour dial has quarter-hour divisions and AM/PM indications. The time switch is programmed by pushing the captive trippers to the outer ring position for the entire period that the load is to be turned “ON”, i.e., fifteen minutes for each tripper on the 24-Hour dial. When the tripper is pushed to the inside, the switch is in the “OFF” position. NOTE: Do not set 2 trippers consecutively.

### DURATION KNOB

By rotating the Duration knob, you can set the number of seconds the system will spray for when the system is running.

When the system is switched to the “OFF” position, nothing will run including the remote feature.

**POWER LIGHT** will illuminate when there is power coming into the control box from the electrical outlet.

**PUMP ON LIGHT** will illuminate when there is power going to the motor and pump.

**OFF LIGHT** will illuminate when the system has been turned off either by the DURATION KNOB or the REMOTE. The system can be turned back on by rotating the DURATION KNOB to the OFF position and back to the chosen duration.